

USER MANUAL

**TOMMATECH 1.2K-3K-5K C PRO
SERIES OFF-GRID INVERTERS**

Table Of Contents

ABOUT THIS MANUAL	1
Purpose.....	1
Scope	1
SAFETY INSTRUCTIONS.....	1
INTRODUCTION	2
Features.....	2
Basic System Architecture	2
Product Overview.....	3
INSTALLATION	4
Unpacking and Inspection	4
Preparation	4
Mounting the Unit.....	4
Battery Connection	5
AC Input/Output Connection.....	7
PV Connection	9
Final Assembly	11
Communication Options.....	11
BMS Communication	11
OPERATION.....	12
Power ON/OFF	12
Operation and Display Panel	12
LCD Display Icons	13
LCD Setting.....	15
Display Setting	22
Operating Mode Description	25
Battery Equalization Description	27
Fault Reference Code.....	29
Warning Indicator.....	29
CLEARANCE AND MAINTENANCE FOR ANTI-DUST KIT.....	30
Overview	30
Clearance and Maintenance	30
SPECIFICATIONS	31
Table 1 Line Mode Specifications	31
Table 2 Inverter Mode Specifications	32
Table 3 Charge Mode Specifications.....	33
Table 4 General Specifications.....	33
TROUBLE SHOOTING	34
Appendix I: BMS Communication Installation.....	35
Appendix II: The Wi-Fi Operation Guide in Remote Panel (Option)	42

ABOUT THIS MANUAL

Purpose

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations. Keep this manual for future reference.

Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

SAFETY INSTRUCTIONS



WARNING: This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

1. Before using the unit, read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
2. **CAUTION** --To reduce risk of injury, charge only deep-cycle lead acid type rechargeable batteries. Other types of batteries may burst, causing personal injury and damage.
3. Do not disassemble the unit. Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
4. To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
5. **CAUTION** – Only qualified personnel can install this device with battery.
6. **NEVER** charge a frozen battery.
7. For optimum operation of this inverter/charger, please follow required spec to select appropriate cable size. It's very important to correctly operate this inverter/charger.
8. Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion.
9. Please strictly follow installation procedure when you want to disconnect AC or DC terminals. Please refer to INSTALLATION section of this manual for the details.
10. One piece of 150A fuse is provided as over-current protection for the battery supply.
11. GROUNDING INSTRUCTIONS -This inverter/charger should be connected to a permanent grounded wiring system. Be sure to comply with local requirements and regulation to install this inverter.
12. NEVER cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.
13. **Warning!!** Only qualified service persons are able to service this device. If errors still persist after following troubleshooting table, please send this inverter/charger back to local dealer or service center for maintenance.
14. **WARNING:** Because this inverter is non-isolated, only three types of PV modules are acceptable: single crystalline, poly crystalline with class A-rated and CIGS modules. To avoid any malfunction, do not connect any PV modules with possible current leakage to the inverter. For example, grounded PV modules will cause current leakage to the inverter. When using CIGS modules, please be sure NO grounding.
15. **CAUTION:** It's requested to use PV junction box with surge protection. Otherwise, it will cause damage on inverter when lightning occurs on PV modules.

INTRODUCTION

This is a multi-function inverter/charger, combining functions of inverter, solar charger and battery charger to offer uninterrupted power support with portable size. Its comprehensive LCD display offers user-configurable and easy-accessible button operation such as battery charging current, AC/solar charger priority, and acceptable input voltage based on different applications.

Features

- Pure sine wave inverter
- Built-in BMS communication port
- Built-in anti-dust kit
- Inverter running without battery
- Configurable input voltage range for home appliances and personal computers via LCD setting
- Configurable battery charging current based on applications via LCD setting
- Configurable AC/Solar Charger priority via LCD setting
- Compatible to mains voltage or generator power
- Overload/ Over temperature/ short circuit protection
- Smart battery charger design for optimized battery performance

Basic System Architecture

The following illustration shows basic application for this inverter/charger. It also includes following devices to have a complete running system:

- Generator or Utility.
- PV modules

Consult with your system integrator for other possible system architectures depending on your requirements.

This inverter can power all kinds of appliances in home or office environment, including motor-type appliances such as tube light, fan, refrigerator and air conditioner.


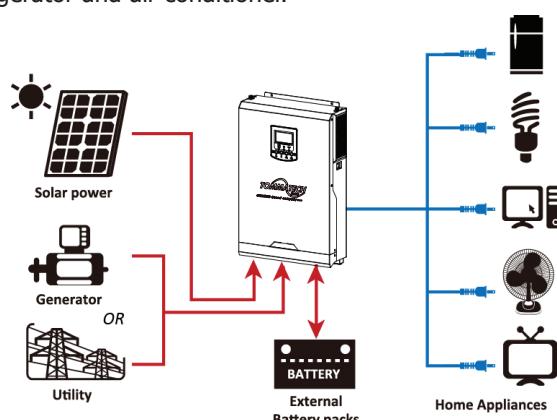


Figure 1 Hybrid Power System

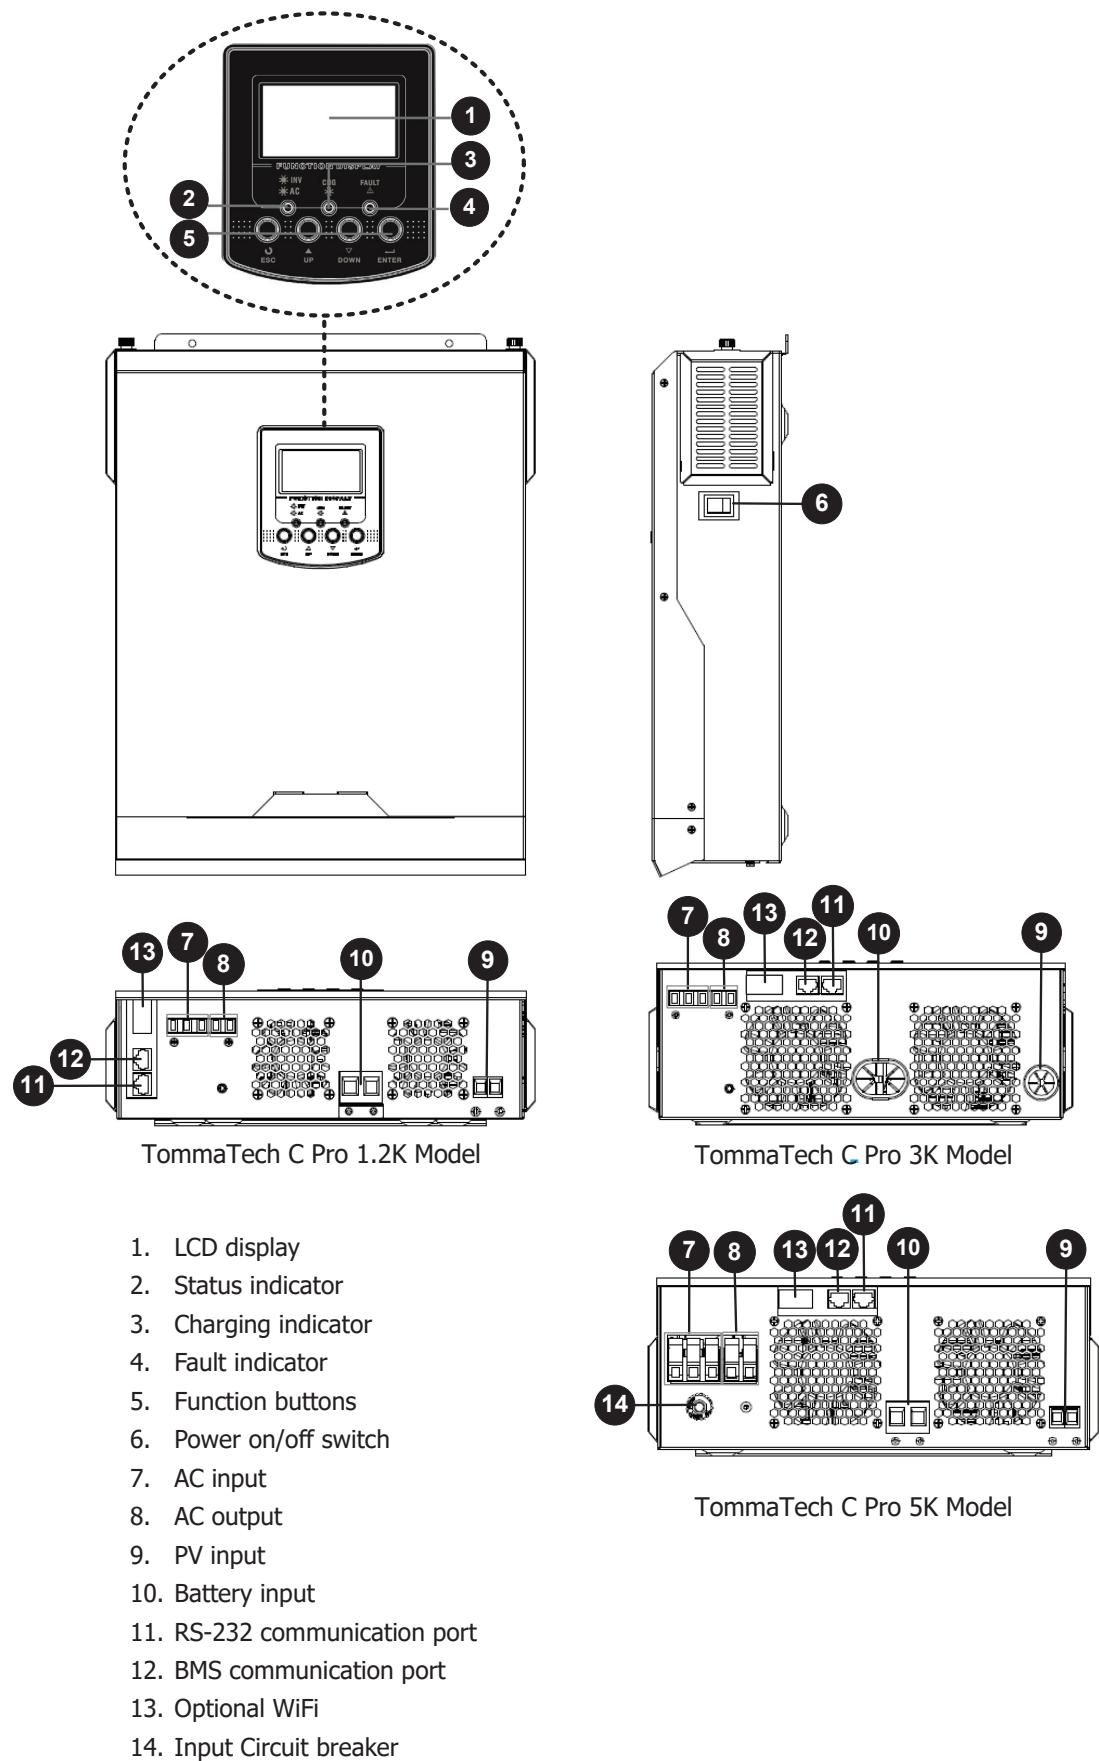Product Overview



1. LCD display
2. Status indicator
3. Charging indicator
4. Fault indicator
5. Function buttons
6. Power on/off switch
7. AC input
8. AC output
9. PV input
10. Battery input
11. RS-232 communication port
12. BMS communication port
13. Optional WiFi
14. Input Circuit breaker

INSTALLATION

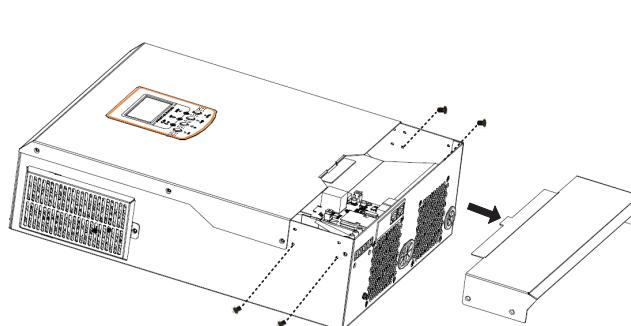
Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:


- The unit x 1
- User manual x 1
- Communication cable x 1
- Software CD x 1
- Ring terminal for Ground x 1
- Strain relief plate x 1 (Only for TommaTech C Pro 1.2 K / TommaTech C Pro 3K / TommaTech C Pro 5K Models)
- Screws x 2 (Only for TommaTech C Pro 1.2 K / TommaTech C Pro 3K / TommaTech C Pro 5K Models)
- DC Fuse x 1 (Only for TommaTech C Pro 5K Model)

Preparation

Before connecting all wirings, please take off bottom cover by removing screws as shown below.



TommaTech C Pro 3K model

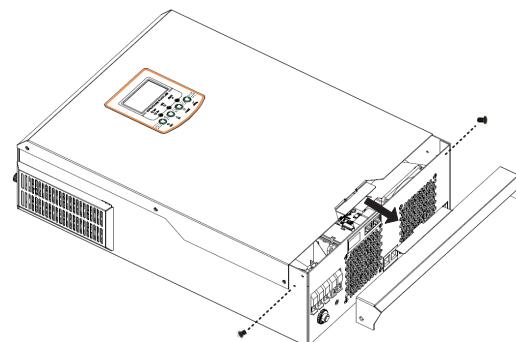


TommaTech C Pro 1.2K/5K models

Mounting the Unit


Consider the following points before selecting where to install:

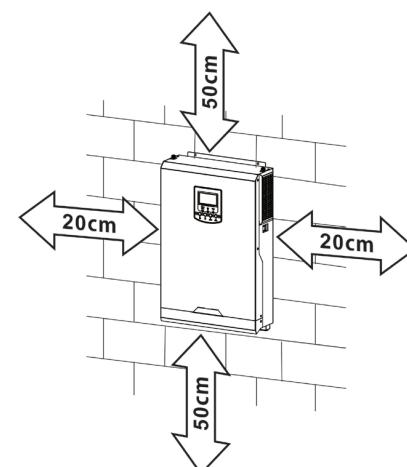- Do not mount the inverter on flammable construction materials.
- Mount on a solid surface
- Install this inverter at eye level in order to allow the LCD display to be read at all times.
- For proper air circulation to dissipate heat, allow a clearance of approx. 20 cm to the side and approx. 50 cm above and below the unit.
- The ambient temperature should be between 0°C and 55°C to ensure optimal operation.
- The recommended installation position is to be adhered to the wall vertically.
- Be sure to keep other objects and surfaces as shown in the diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.



SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY.

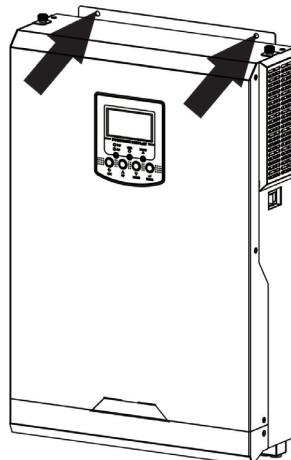Install the unit by screwing two screws. It's recommended to use M4 or M5 screws.



Battery Connection

This model can be operated without battery connection. Connect to battery if necessary.

CAUTION: For safety operation and regulation compliance, it's requested to install a separate DC over-current protector or disconnect device between battery and inverter. It may not be requested to have a disconnect device in some applications, however, it's still requested to have over-current protection installed. Please refer to typical amperage in below table as required fuse or breaker size.

WARNING! All wiring must be performed by a qualified personnel.


WARNING! It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, please use the proper recommended cable as below.

Recommended battery cable size:


Model	Wire Size	Cable (mm ²)	Torque value (max)
TommaTech C Pro 1.2K	1 x 4AWG	25	2 Nm
TommaTech C Pro 3K/5K	1 x 2AWG	35	2 Nm

Please follow below steps to implement battery connection:

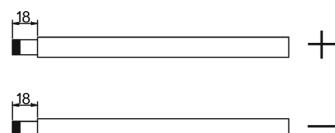
1. For 1.2KVA/3KVA-24V/5KVA models, remove insulation sleeve 18 mm for positive and negative conductors. Suggest to put bootlace ferrules on the end of positive and negative wires with a proper crimping tool.



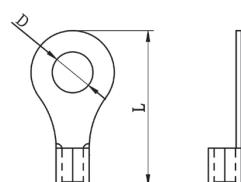
For 3KVA-24V model, refer to recommended battery spec table to purchase separately two ring terminals and battery wires. Assemble two ring terminals with battery wires based on recommended battery cable and terminal size as grounding cable. Recommended dimensions for ring terminal is D (8.4 mm) and L (39.2 mm).



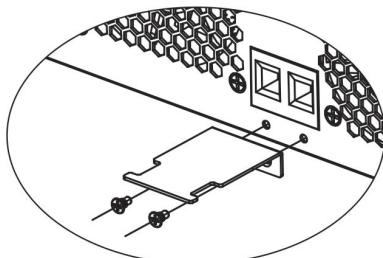2. This step is only for 1.2KVA-12V/3KVA-24V/5KVA-48V models. Fix strain relief plate to the inverter with supplied screws as shown in below chart.




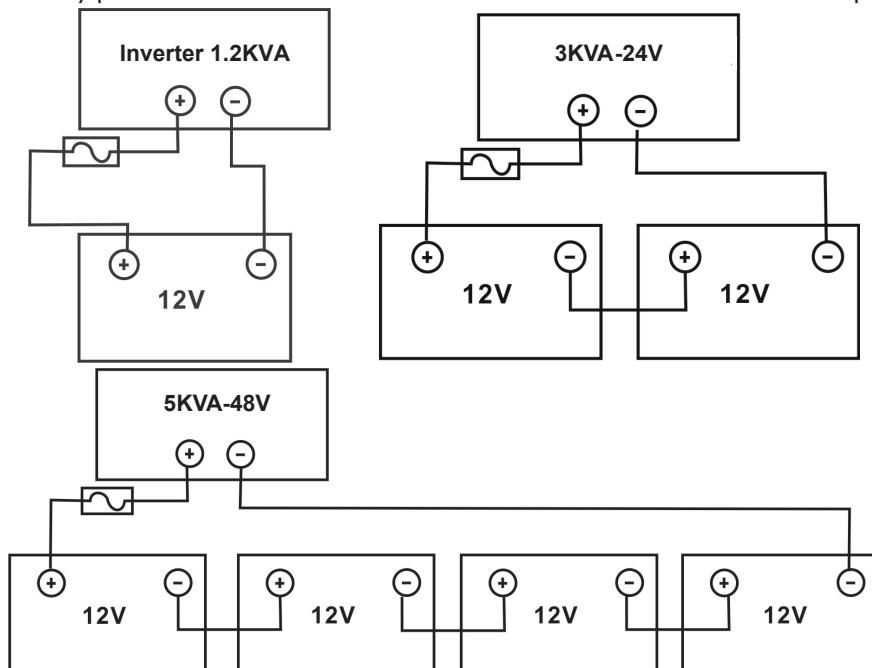3. Connect all battery packs as below chart. It is recommend to connect at least 100Ah capacity battery.




4. For 1.2KVA-12V/3KVA-24V/5KVA-48V models, insert the battery wires flatly into battery connectors of inverter and make sure the bolts are tightened with torque of 2 Nm in clockwise direction. Make sure polarity at both the battery and the inverter/charge is correctly connected and conductors are tightly screwed into the battery terminals.

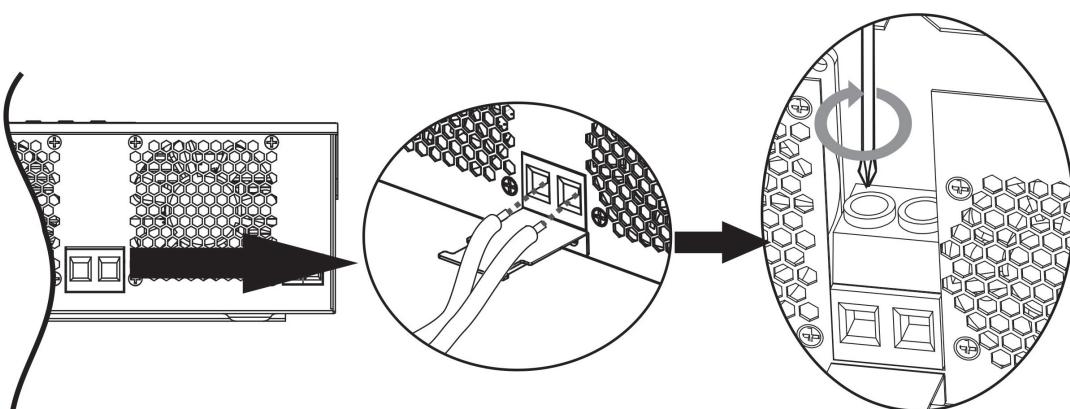
Recommended tool: #2 Pozi Screwdriver



For 3K-24V model, secure assembled ring terminals to the battery terminal block with the bolts properly tightened. Refer to battery cable size for torque value. Make sure polarity at both the battery and the inverter is correctly connected and ring terminals are secured to the battery terminals.

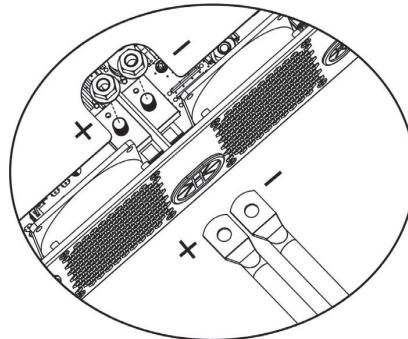

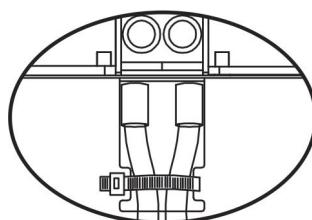5. This step is only for 1.2KVA-12V models. To firmly secure wire connection, you may fix the wires to strain relief with cable tie.



WARNING: Shock Hazard

Installation must be performed with care due to high battery voltage in series.



CAUTION!! Do not place anything between inverter terminals and the ring terminals. Otherwise, overheating may occur.

CAUTION!! Do not apply anti-oxidant substance on the terminals before terminals are securely tightened.

CAUTION!! Before making the final DC connection or closing DC breaker/disconnector, be sure positive (+) must be connected to positive (+) and negative (-) must be connected to negative (-).

AC Input/Output Connection

CAUTION!! Before connecting to AC input power source, please install a **separate** AC breaker between inverter and AC input power source. This will ensure the inverter can be securely disconnected during maintenance and fully protected from over current of AC input. The recommended spec of AC breaker is 20A.

CAUTION!! There are two terminal blocks with "IN" and "OUT" markings. Please do NOT mis-connect input and output connectors.

WARNING! All wiring must be performed by a qualified personnel.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable size as below.

Suggested cable requirement for AC wires

Model	Gauge	Cable (mm ²)	Torque Value
TommaTech C Pro 1.2K	16 AWG	1.5	0.6 Nm
TommaTech C Pro 3K	14 AWG	2.5	0.6 Nm
TommaTech C Pro 5K	10 AWG	6	1.2 Nm

Please follow below steps to implement AC input/output connection:

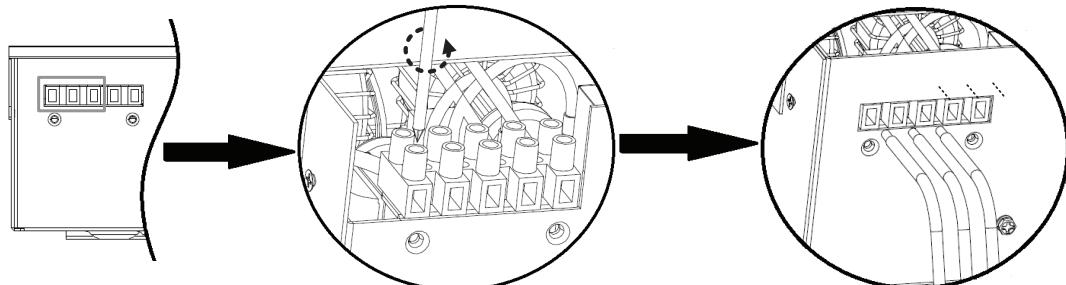
1. Before making AC input/output connection, be sure to open DC protector or disconnector first.

2. Remove insulation sleeve 10mm for six conductors. And shorten phase L and neutral conductor N 3 mm.
3. Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective conductor (⏚) first.


⏚→**Ground (yellow-green)**

L→**LINE (brown or black)**

N→**Neutral (blue)**



TommaTech C Pro 1.2K/3K models

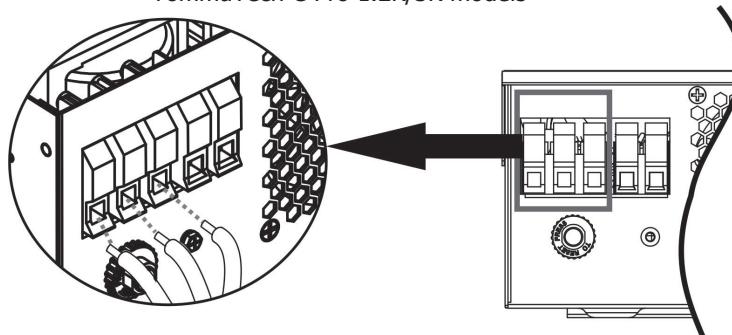

TommaTech C Pro 5K model



WARNING:

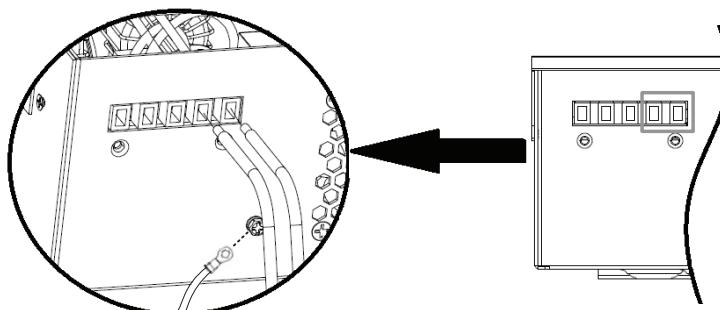
Be sure that AC power source is disconnected before attempting to hardwire it to the unit.

4. Then, insert AC output wires according to polarities indicated on terminal block and tighten terminal screws. Be sure to connect PE protective conductor (⏚) first.


⏚→**Ground (yellow-green)**

L→**LINE (brown or black)**

N→**Neutral (blue)**



TommaTech C Pro 1.2K/3K models

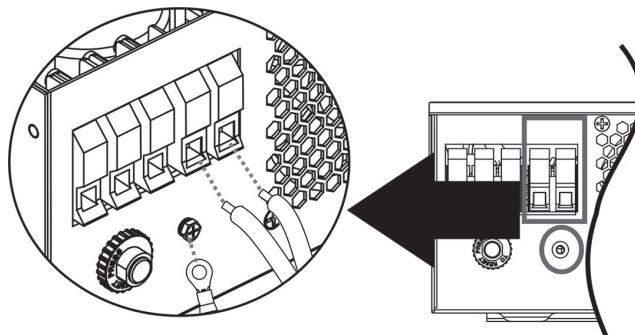

TommaTech C Pro 5K Model

5. Make sure the wires are securely connected.

CAUTION: Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this inverter/charger will trig overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

PV Connection

CAUTION: Before connecting to PV modules, please install **separately** a DC circuit breaker between inverter and PV modules.

WARNING! It's very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

Wire Size	Cable (mm ²)	Torque value (max)
1 x 12AWG	4	1.2 Nm

WARNING: Because this inverter is non-isolated, only three types of PV modules are acceptable: single crystalline, poly crystalline with class A-rated and CIGS modules.

To avoid any malfunction, do not connect any PV modules with possible current leakage to the inverter. For example, grounded PV modules will cause current leakage to the inverter. When using CIGS modules, please be sure NO grounding.

CAUTION: It's requested to use PV junction box with surge protection. Otherwise, it will cause damage on inverter when lightning occurs on PV modules.

Never directly touch the terminals of inverter. It might cause lethal electric shock.

PV Module Selection:

When selecting proper PV modules, please be sure to consider below parameters:

1. Open circuit Voltage (Voc) of PV modules not exceeds max. PV array open circuit voltage of inverter.
2. Open circuit Voltage (Voc) of PV modules should be higher than min. battery voltage.

INVERTER MODEL	TommaTech C Pro 1.2K	TommaTech C Pro 3K	TommaTech C Pro 5K
Max. PV Array Open Circuit Voltage	350Vdc	450Vdc	500Vdc
PV Array MPPT Voltage Range	30~300Vdc	30~400Vdc	120Vdc~450Vdc

Take 250Wp PV module as an example. After considering above two parameters, the recommended module configurations are listed as below table.



Solar Panel Spec. (reference)	SOLAR INPUT	Q'ty of panels	Total input power
	TommaTech C Pro 1.2K/3K models : Min in serial: 3 pcs, max. in serial: 12 pcs; 5KVA model: Min in serial: 3 pcs, max. in serial: 13 pcs)		
- 250Wp	3 pcs in serial	3 pcs	750W
- Vmp: 30.1Vdc	6 pcs in serial	6 pcs	1500W
- Imp: 8.3A	8 pcs in serial	8 pcs	2000W
- Voc: 37.7Vdc	12 pcs in serial	12 pcs	3000W
- Isc: 8.4A	13 pcs in serial (only for 5KVA model)	13 pcs	3250W
- Cells: 60	8 pieces in serial and 2 sets in parallel (only for 5KVA model)	16 pcs	4000W
	10 pieces in serial and 2 sets in parallel (only for 5KVA model)	20 pcs	5000W

PV Module Wire Connection


Please follow below steps to implement PV module connection:

1. Remove insulation sleeve 10 mm for positive and negative conductors.
2. Suggest to put bootlace ferrules on the end of positive and negative wires with a proper crimping tool.
3. Check correct polarity of wire connection from PV modules and PV input connectors. Then, connect positive pole (+) of connection wire to positive pole (+) of PV input connector. Connect negative pole (-) of connection wire to negative pole (-) of PV input connector. Screw two wires tightly in clockwise direction.

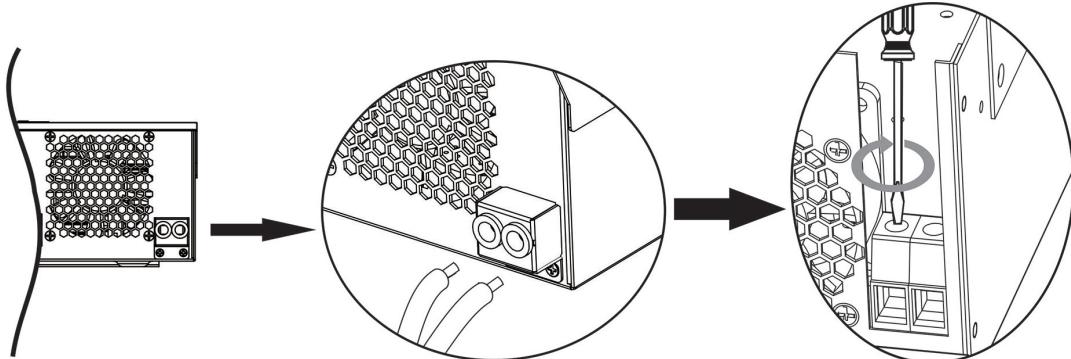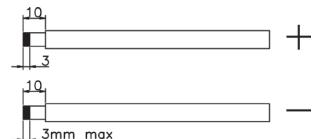Recommended tool: 4mm blade screwdriver




TommaTech C Pro 1.2K/5K models

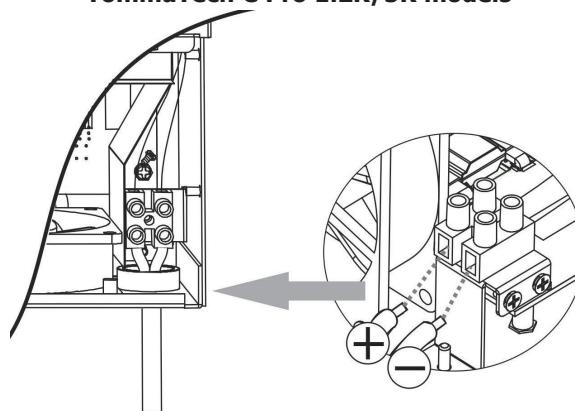

TommaTech C Pro 3K model

Final Assembly

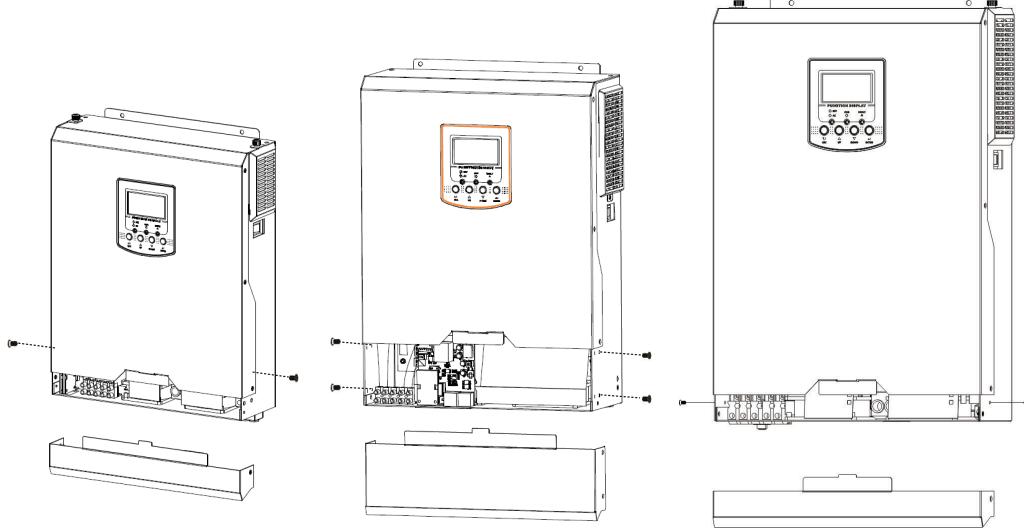After connecting all wirings, please put bottom cover back by screwing screws as shown below.



TommaTech C Pro 1.2K

TommaTech C Pro 3K

TommaTech C Pro 5K

Communication Options

Serial Connection

Please use the supplied serial cable to connect between the inverter and your PC. Install the monitoring software from the bundled CD and follow the on-screen instructions to complete your installation. For detailed software operation, refer to the software user manual on the bundled CD.

Optional Wi-Fi Connection

You may purchase an optional Wi-Fi function of the unit which is equipped with a Wi-Fi transmitter. Wi-Fi transmitter can enable wireless communication between off-grid inverters and monitoring platform. Users can access and control the monitored inverter with downloaded APP. You may find "WatchPower" app from the Apple® Store or "WatchPower Wi-Fi" in Google® Play Store. All data loggers and parameters are saved in iCloud. For quick installation and operation, please check Appendix II.



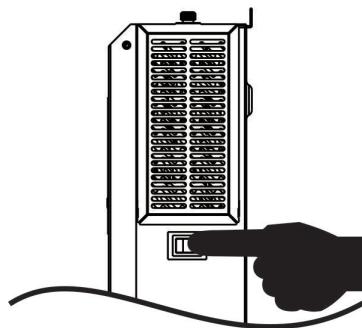
BMS Communication

It is recommended to purchase a special communication cable if you are connecting to Lithium-Ion battery banks. Please refer to Appendix B- BMS Communication Installation for details.

OPERATION

Power ON/OFF


Side view of unit



Once the unit has been properly installed and the batteries are connected well, simply press On/Off switch (located on the button of the case) to turn on the unit.

Operation and Display Panel

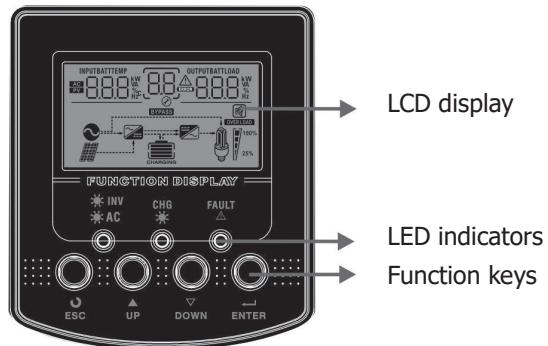The operation and display panel, shown in below chart, is on the front panel of the inverter. It includes three indicators, four function keys and a LCD display, indicating the operating status and input/output power information.




LED Indicator

LED Indicator		Messages	
 	Green	Solid On	Output is powered by utility in Line mode.
		Flashing	Output is powered by battery or PV in battery mode.
	Green	Solid On	Battery is fully charged.
		Flashing	Battery is charging.
	Red	Solid On	Fault occurs in the inverter.
		Flashing	Warning condition occurs in the inverter.

Function Keys

Function Key	Description
ESC	To exit setting mode
UP	To go to previous selection
DOWN	To go to next selection
ENTER	To confirm the selection in setting mode or enter setting mode

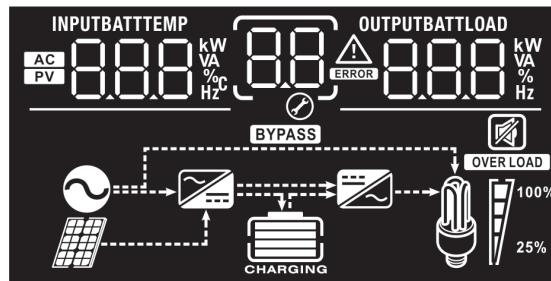LCD Display Icons



Icon	Function description
Input Source Information	
AC	Indicates the AC input.
PV	Indicates the PV input
INPUTBATT  <small>kW VA % Hz</small>	Indicate input voltage, input frequency, PV voltage, charger current, charger power, battery voltage.
Configuration Program and Fault Information	
	Indicates the setting programs.
	Indicates the warning and fault codes. Warning:  <small>flashing with warning code.</small> Fault:  <small>lighting with fault code</small>
Output Information	
OUTPUTBATTLOAD  <small>kW VA % Hz</small>	Indicate output voltage, output frequency, load percent, load in VA, load in Watt and discharging current.
Battery Information	
	Indicates battery level by 0-24%, 25-49%, 50-74% and 75-100% in battery mode and charging status in line mode.
In AC mode, it will present battery charging status.	
Status	Battery voltage
Constant Current mode / Constant Voltage mode	<2V/cell
	2 ~ 2.083V/cell
	2.083 ~ 2.167V/cell
	> 2.167 V/cell
Floating mode. Batteries are fully charged.	
	4 bars will be on.

In battery mode, it will present battery capacity.








Load Percentage	Battery Voltage	LCD Display
Load > 50%	< 1.85V/cell	
	1.85V/cell ~ 1.933V/cell	
	1.933V/cell ~ 2.017V/cell	
	> 2.017V/cell	
Load < 50%	< 1.892V/cell	
	1.892V/cell ~ 1.975V/cell	
	1.975V/cell ~ 2.058V/cell	
	> 2.058V/cell	
Load Information		
	Indicates overload.	
 100% 25%	Indicates the load level by 0-24%, 25-49%, 50-74% and 75-100%.	
	0%~24%	25%~49%
		
		
Mode Operation Information		
	Indicates unit connects to the mains.	
	Indicates unit connects to the PV panel.	
	Indicates load is supplied by utility power.	
	Indicates the utility charger circuit is working.	
	Indicates the DC/AC inverter circuit is working.	
Mute Operation		
	Indicates unit alarm is disabled.	

LCD Setting

After pressing and holding ENTER button for 3 seconds, the unit will enter setting mode. Press "UP" or "DOWN" button to select setting programs. And then, press "ENTER" button to confirm the selection or ESC button to exit.




Setting Programs:


Program	Description	Selectable option	
00	Exit setting mode	Escape 00 <input type="text" value="ESC"/> 	
01	Output source priority: To configure load power source priority	Utility first (default) 01 <input type="text" value="UEI"/> 	Utility will provide power to the loads as first priority. Solar and battery energy will provide power to the loads only when utility power is not available.
		Solar first 01 <input type="text" value="SOL"/> 	Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, Utility energy will supply power to the loads at the same time.
		SBU priority 01 <input type="text" value="SBU"/> 	Solar energy provides power to the loads as first priority. If solar energy is not sufficient to power all connected loads, battery energy will supply power to the loads at the same time. Utility provides power to the loads only when battery voltage drops to either low-level warning voltage or the setting point in program 12.
02	Maximum charging current: To configure total charging current for solar and utility chargers. (Max. charging current = utility charging current + solar charging current)	60A (default) 02 <input type="text" value="60"/>  A	Setting range is from 10A to 100A. Increment of each click is 10A.
03	AC input voltage range	Appliances (default) 03 <input type="text" value="APL"/> 	If selected, acceptable AC input voltage range will be within 90-280VAC.
		UPS 03 <input type="text" value="UPS"/> 	If selected, acceptable AC input voltage range will be within 170-280VAC.
05	Battery type	AGM (default) 05 <input type="text" value="AGM"/> 	Flooded 05 <input type="text" value="FLd"/> 

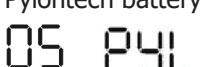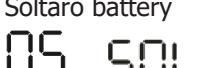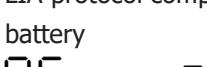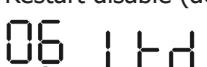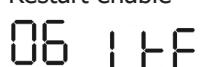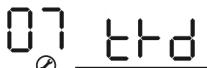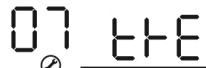
05	Battery type	User-Defined 	If "User-Defined" is selected, battery charge voltage and low DC cut-off voltage can be set up in program 26, 27 and 29.
		Pylontech battery 	If selected, programs of 02, 26, 27 and 29 will be automatically set up. No need for further setting.
		WECO battery 	If selected, programs of 02, 12, 26, 27 and 29 will be auto-configured per battery supplier recommended. No need for further adjustment.
		Soltaro battery 	If selected, programs of 02, 26, 27 and 29 will be automatically set up. No need for further setting.
		LIA-protocol compatible battery 	Select "LIA" if using Lithium battery compatible to CAN protocol. If selected, programs of 02, 26, 27 and 29 will be automatically set up. No need for further setting.
		LIB-protocol compatible battery 	Select "LIB" if using Lithium battery compatible to RS485 protocol. If selected, programs of 02, 26, 27 and 29 will be automatically set up. No need for further setting.
06	Auto restart when overload occurs	3 rd party Lithium battery 	Select "LIC" if using Lithium battery not listed above. If selected, programs of 02, 26, 27 and 29 will be automatically set up. No need for further setting. Please contact the battery supplier for installation procedure.
		Restart disable (default) 	Restart enable 
07	Auto restart when over temperature occurs	Restart disable (default) 	Restart enable 
09	Output frequency	50Hz (default) 	60Hz 
10	Output voltage	220V 	230V (default) 

		240V 10 240v	
11	Maximum utility charging current Note: If setting value in program 02 is smaller than that in program in 11, the inverter will apply charging current from program 02 for utility charger.	Available options in 1.2K/3KVA-24V models 40A (default) 11 40 A	Setting range is 2A, then from 10A to 80A. Increment of each click is 10A.
		Available options in 3KVA-48V model 30A (default) 11 30 A	Setting range is 2A, then from 10A to 60A. Increment of each click is 10A.
		Available options in 5KVA model: 30A (default) 11 30 A	Setting range is 2A, then from 10A to 100A. Increment of each click is 10A.
12	Setting voltage point back to utility source when selecting "SBU priority" or "Solar first" in program 01.	Available options in 1.2KVA model: 11.0V BATT 12 110 v 11.5V (default) BATT 12 115 v 12.0V BATT 12 120 v 12.5V BATT 12 125 v	11.3V BATT 12 113 v 11.8V BATT 12 118 v 12.3V BATT 12 123 v 12.8V BATT 12 128 v
		Available options in 3KVA-24V model: 23.0V (default) 12 230 v	Setting range is from 22V to 25.5V. Increment of each click is 0.5V.
		Available options in 3KVA-48V/5KVA model: 46V (default) 12 46 v	Setting range is from 44V to 51V. Increment of each click is 1V.
		Available options when any lithium battery type is selected in Program 05.	
		SOC 10% (default for Lithium) 12 BATT 10 %	If any types of lithium battery is selected in program 05, setting value will change to SOC automatically. Adjustable range is 5% to 95%.

13	Available options in 1.2KVA model:	
	Battery fully charged	12.0V
		
	12.3V	12.5V
		
	12.8V	13.0V
		
	13.3V	13.5V (default)
		
	13.8V	14.0V
		
	14.3V	14.5V
		
Available options in 3KVA-24V model:		
Setting range is FUL and from 24V to 29V. Increment of each click is 0.5V.		
Battery fully charged	27V (default)	
		
Available options in 5KVA model:		
Setting range is FUL and from 48V to 58V. Increment of each click is 1V.		
Battery fully charged	54V (default)	
		
Available option when any lithium battery type is selected in Program 05.		
SOC 80% (default for Lithium)	If any types of lithium battery is selected in program 05, setting value will change to SOC automatically. Adjustable range is 10% to 100%. Increment of each click is 5%.	
		



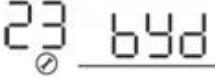
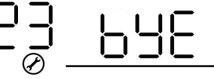
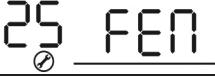
16	Charger source priority: To configure charger source priority	If this inverter/charger is working in Line, Standby or Fault mode, charger source can be programmed as below:	
		Solar first 	Solar energy will charge battery as first priority. Utility will charge battery only when solar energy is not available.
		Solar and Utility (default) 	Solar energy and utility will charge battery at the same time.
		Only Solar 	Solar energy will be the only charger source no matter utility is available or not.
If this inverter/charger is working in Battery mode, only solar energy can charge battery. Solar energy will charge battery if it's available and sufficient.			
18	Alarm control	Alarm on (default) 	Alarm off 
19	Auto return to default display screen	Return to default display screen (default) 	If selected, no matter how users switch display screen, it will automatically return to default display screen (Input voltage /output voltage) after no button is pressed for 1 minute.
		Stay at latest screen 	If selected, the display screen will stay at latest screen user finally switches.
20	Backlight control	Backlight on (default) 	Backlight off 
22	Beeps while primary source is interrupted	Alarm on (default) 	Alarm off 
23	Overload bypass: When enabled, the unit will transfer to line mode if overload occurs in battery mode.	Bypass disable (default) 	Bypass enable 
25	Record Fault code	Record enable (default) 	Record disable 
26	Bulk charging voltage (C.V voltage)	1.2KVA default setting: 14.1V 	







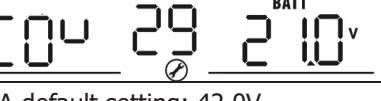
26	Bulk charging voltage (C.V voltage)	3KVA-24V default setting: 28.2V
		
		5KVA-48V default setting: 56.4V
27	Floating charging voltage	
		If self-defined is selected in program 5, this program can be set up. Setting range is from 12.5V to 15.0V for 1.2KVA model, 25.0V to 31.0V for 3KVA-24V model 48.0V to 61.0V for 5KVA model. Increment of each click is 0.1V.
		1.2KVA default setting: 13.5V
27	Floating charging voltage	
		3KVA-24V default setting: 27.0V
		
29	Low DC cut-off voltage	5KVA default setting: 54.0V
		
		If self-defined is selected in program 5, this program can be set up. Setting range is from 12.5V to 15.0V for 1.2KVA model, 25.0V to 31.0V for 3KVA-24V models 48.0V to 61.0V for 5KVA model. Increment of each click is 0.1V.
29	Low DC cut-off voltage	1.2KVA default setting: 10.5V
		
		3KVA-24V default setting: 21.0V
29	Low DC cut-off voltage	
		5KVA default setting: 42.0V
		
29	Low DC cut-off voltage	If self-defined is selected in program 5, this program can be set up. Setting range is from 10.5V to 12.0V for 1.2KVA model, 21.0V to 24.0V for 3KVA-24V models and 42.0V to 48.0V for 48V/5KVA model. Increment of each click is 0.1V. Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected.






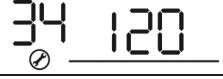
29	Low DC cut-off voltage	lithium battery default setting: SOC 5%  If any type of lithium battery is selected in program 05, setting value will change to SOC automatically. Adjustable range is 0% to 90%. Increment of each click is 1%.	
30	Battery equalization	Battery equalization 	Battery equalization disable (default) 
	If "Flooded" or "User-Defined" is selected in program 05, this program can be set up.		
31	Battery equalization voltage	1.2KVA default setting: 14.6V  3KVA-24V default setting: 29.2V  5KVA default setting: 58.4V 	
	Setting range 12.0V to 15.0V for 1.2KVA model, 25.0V to 31.0V and 48.0V to 61.0V for 3KVA-24V models Valid for 5KVA model. The increment of each click is 0.1V.		
33	Battery equalized time	60min (default) 	Setting range is from 5min to 900min. Increment of each click is 5min.
34	Battery equalized timeout	120min (default) 	Setting range is from 5min to 900 min. Increment of each click is 5 min.
35	Equalization interval	30days (default) 	Setting range is from 0 to 90 days. Increment of each click is 1 day
36	Equalization activated immediately	Enable 	Disable (default) 
	If equalization function is enabled in program 30, this program can be set up. If "Enable" is selected in this program, it's to activate battery equalization immediately and LCD main page will shows "E9". If "Disable" is selected, it will cancel equalization function until next activated equalization time arrives based on program 35 setting. At this time, "E9" will not be shown in LCD main page.		






Display Setting

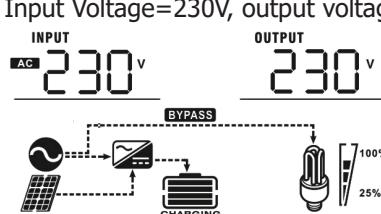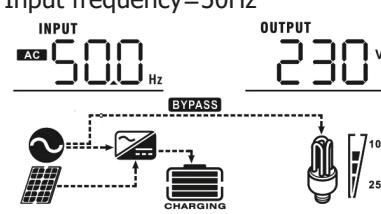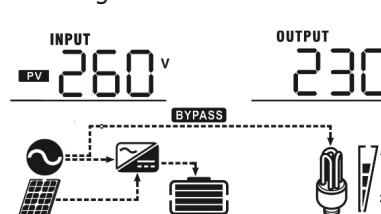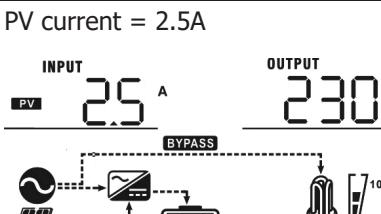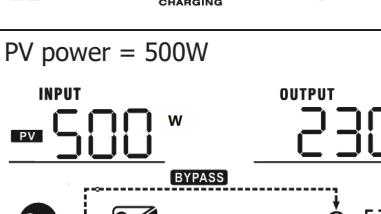The LCD display information will be switched in turns by pressing "UP" or "DOWN" key. The selectable information is switched as following order in listed table.

Selectable information	LCD display
Input voltage/Output voltage (Default Display Screen)	Input Voltage=230V, output voltage=230V 
Input frequency	Input frequency=50Hz 
PV voltage	PV voltage=260V 
PV current	PV current = 2.5A 
PV power	PV power = 500W 

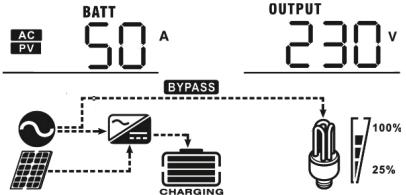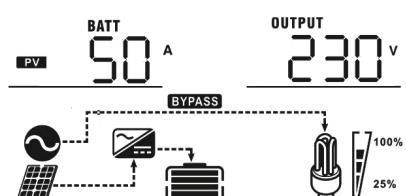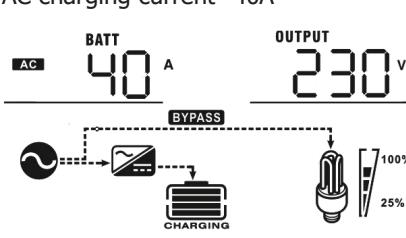
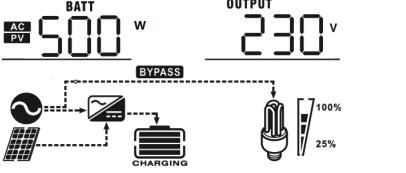
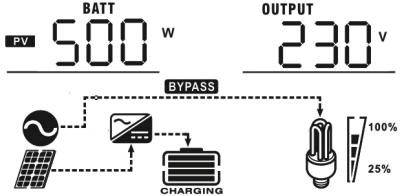
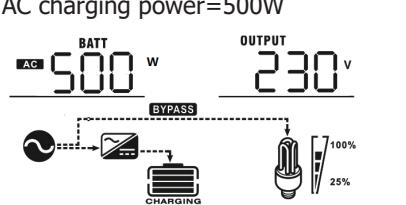
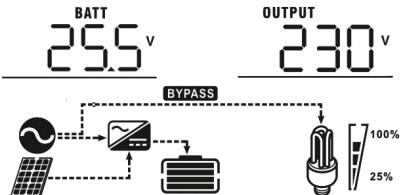
Charging current	<p>AC and PV charging current=50A</p>  <p>PV charging current=50A</p>  <p>AC charging current=40A</p> 
Charging power	<p>AC and PV charging power=500W</p>  <p>PV charging power=500W</p>  <p>AC charging power=500W</p> 
Battery voltage and output voltage	<p>Battery voltage=25.5V, output voltage=230V</p> 

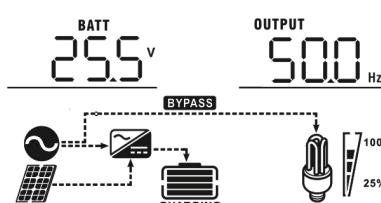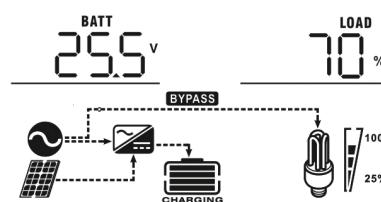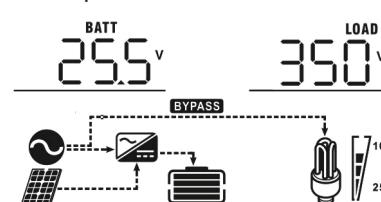
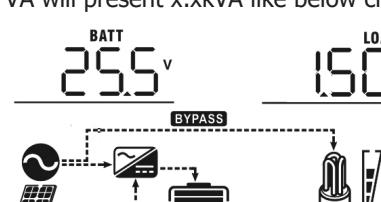
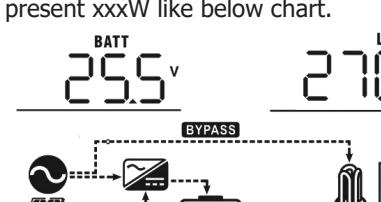
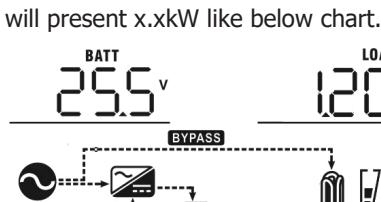
Output frequency	Output frequency=50Hz 
Load percentage	Load percent=70% 
Load in VA	When connected load is lower than 1kVA, load in VA will present xxxVA like below chart.  When load is larger than 1kVA (1KVA), load in VA will present x.xkVA like below chart. 
Load in Watt	When load is lower than 1kW, load in W will present xxxW like below chart.  When load is larger than 1kW (1KW), load in W will present x.xkW like below chart. 

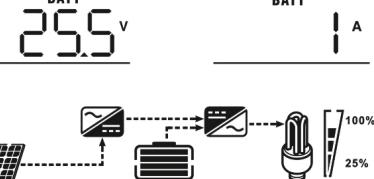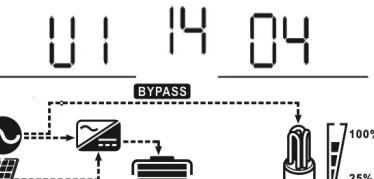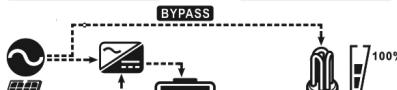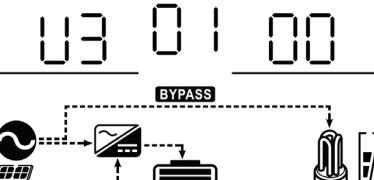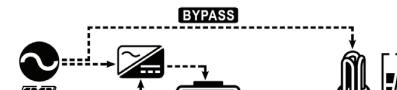Battery voltage/DC discharging current	Battery voltage=25.5V, discharging current=1A  
Main CPU version checking	Main CPU version 00014.04  
Secondary CPU version checking.	Secondary CPU version 00001.00  

Operating Mode Description

Operation mode	Description	LCD display
Standby mode Note: *Standby mode: The inverter is not turned on yet but at this time, the inverter can charge battery without AC output.	No output is supplied by the unit but it still can charge batteries.	   

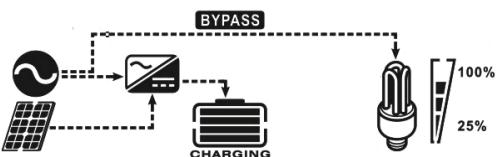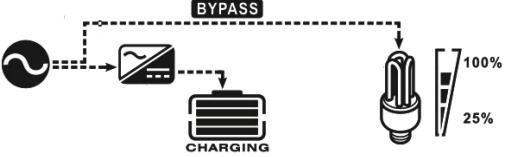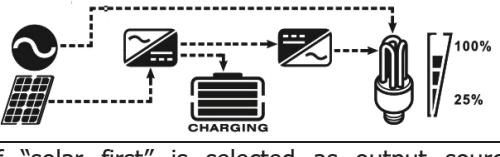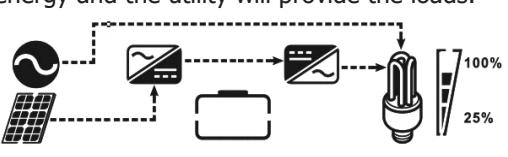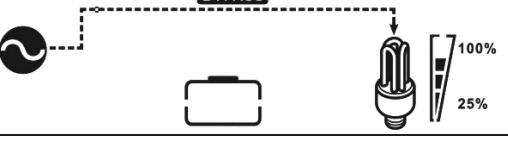Operation mode	Description	LCD display
Fault mode Note: *Fault mode: Errors are caused by inside circuit error or external reasons such as over temperature, output short circuited and so on.	PV energy and utility can charge batteries.	<p>Charging by utility and PV energy.</p>  <p>Charging by utility.</p>  <p>Charging by PV energy.</p>  <p>No charging.</p> 
Line Mode	The unit will provide output power from the mains. It will also charge the battery at line mode.	<p>Charging by utility and PV energy.</p> 
	The unit will provide output power from the mains. It will also charge the battery at line mode.	<p>Charging by utility.</p>  <p>If "solar first" is selected as output source priority and solar energy is not sufficient to provide the load, solar energy and the utility will provide the loads and charge the battery at the same time.</p> 
		<p>If "solar first" is selected as output source priority and battery is not connected, solar energy and the utility will provide the loads.</p>  <p>Power from utility.</p> 

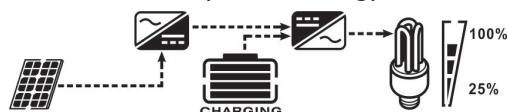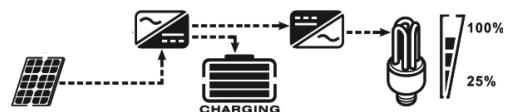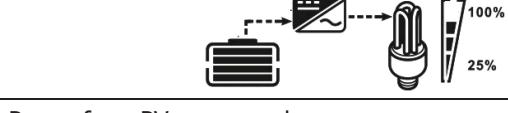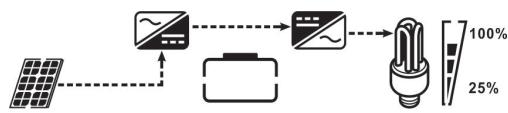Operation mode	Description	LCD display
Battery Mode	The unit will provide output power from battery and PV power.	<p>Power from battery and PV energy.</p>  <p>PV energy will supply power to the loads and charge battery at the same time.</p>  <p>Power from battery only.</p>  <p>Power from PV energy only.</p> 

Battery Equalization Description

Equalization function is added into charge controller. It reverses the buildup of negative chemical effects like stratification, a condition where acid concentration is greater at the bottom of the battery than at the top. Equalization also helps to remove sulfate crystals that might have built up on the plates. If left unchecked, this condition, called sulfation, will reduce the overall capacity of the battery. Therefore, it's recommended to equalize battery periodically.

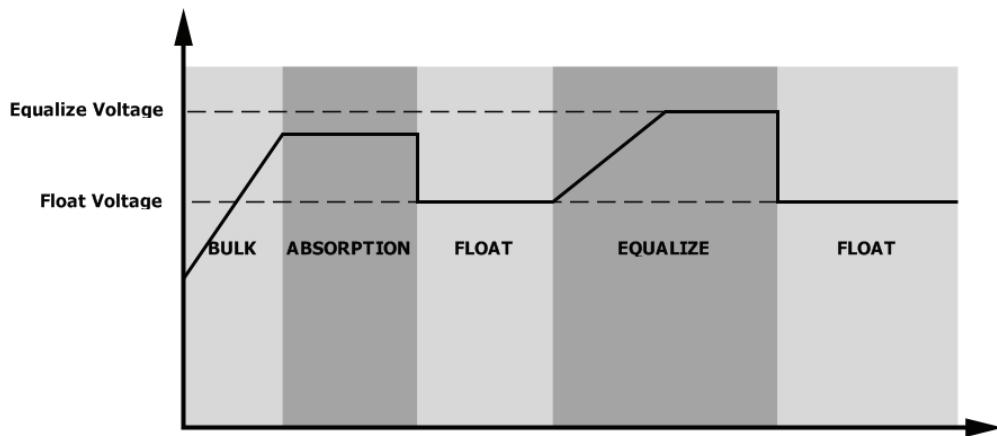
● How to Apply Equalization Function

You must enable battery equalization function in monitoring LCD setting program 30 first. Then, you may apply this function in device by either one of following methods:

1. Setting equalization interval in program 35.
2. Active equalization immediately in program 36.


● When to Equalize

In float stage, when the setting equalization interval (battery equalization cycle) is arrived, or equalization is active immediately, the controller will start to enter Equalize stage.




- **Equalize charging time and timeout**

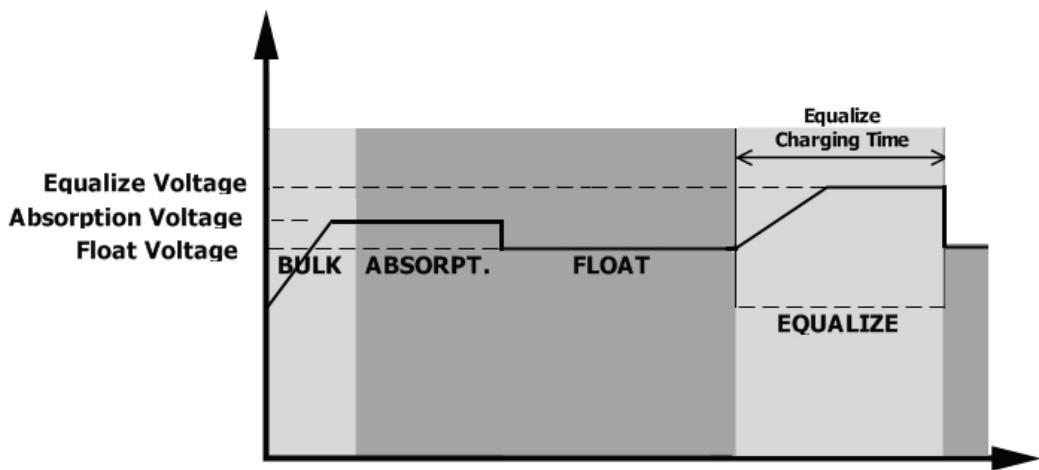In Equalize stage, the controller will supply power to charge battery as much as possible until battery voltage raises to battery equalization voltage. Then, constant-voltage regulation is applied to maintain battery voltage at the battery equalization voltage. The battery will remain in the Equalize stage until setting battery equalized time is arrived.



However, in Equalize stage, when battery equalized time is expired and battery voltage doesn't rise to battery equalization voltage point, the charge controller will extend the battery equalized time until battery voltage achieves battery equalization voltage. If battery voltage is still lower than battery equalization voltage when battery equalized timeout setting is over, the charge controller will stop equalization and return to float stage.

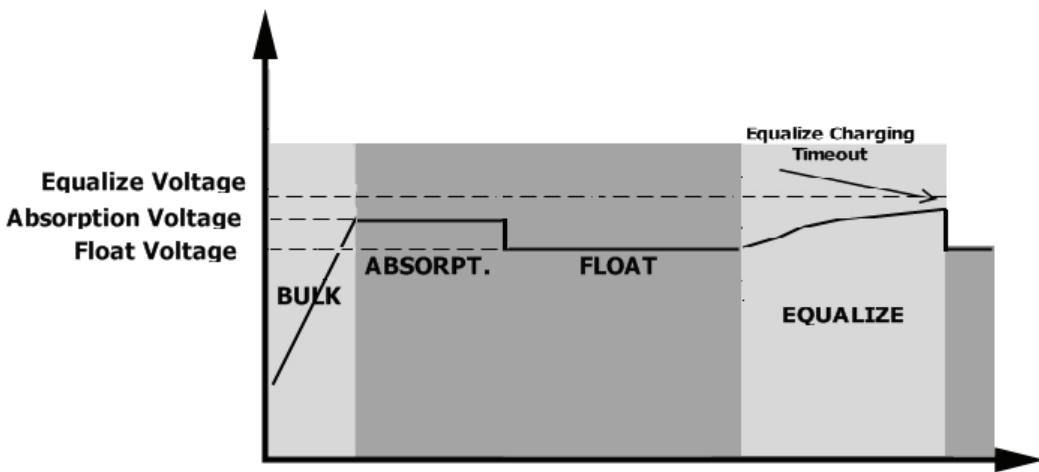


Fault Reference Code

Fault Code	Fault Event	Icon on
01	Fan is locked when inverter is off.	
02	Over temperature or NTC is not connected well.	
03	Battery voltage is too high	
04	Battery voltage is too low	
05	Output short circuited or over temperature is detected by internal converter components.	
06	Output voltage is too high.	
07	Overload time out	
08	Bus voltage is too high	
09	Bus soft start failed	
51	Over current or surge	
52	Bus voltage is too low	
53	Inverter soft start failed	
55	Over DC voltage in AC output	
57	Current sensor failed	
58	Output voltage is too low	
59	PV voltage is over limitation	

Warning Indicator

Warning Code	Warning Event	Audible Alarm	Icon flashing
01	Fan is locked when inverter is on.	Beep three times every second	
02	Over temperature	None	
03	Battery is over-charged	Beep once every second	
04	Low battery	Beep once every second	
07	Overload	Beep once every 0.5 second	
10	Output power derating	Beep twice every 3 seconds	
15	PV energy is low.	Beep twice every 3 seconds	
16	High AC input (>280VAC) during BUS soft start	None	
32	Communication failure between inverter and communication board	None	

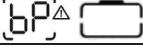Eq	Battery equalization	None	
bp	Battery is not connected	None	

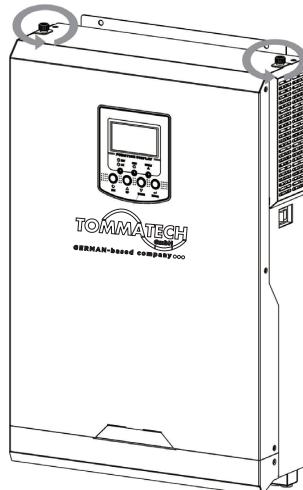
CLEARANCE AND MAINTENANCE FOR ANTI-DUST KIT

Overview


Every inverter is already installed with anti-dust kit from factory. This kit keeps dusk from your inverter and increases product reliability in harsh environment.

Clearance and Maintenance

Step 1: Please loosen the screw in counterclockwise direction on the top of the inverter.



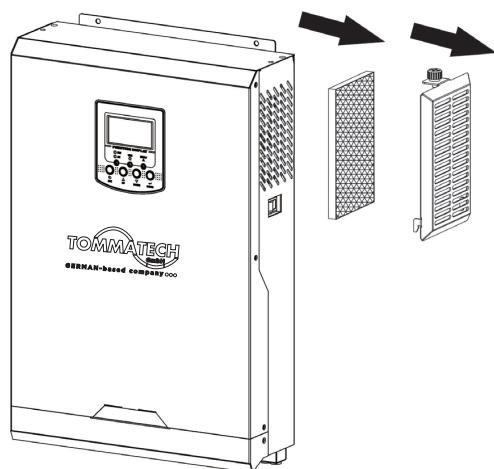Step 2: Then, dustproof case can be removed and take out air filter foam as shown in below chart.



Step 3: Clean air filter foam and dustproof case. After clearance, re-assemble the dust-kit back to the inverter.

NOTICE: The anti-dust kit should be cleaned from dust every one month.

SPECIFICATIONS

Table 1 Line Mode Specifications

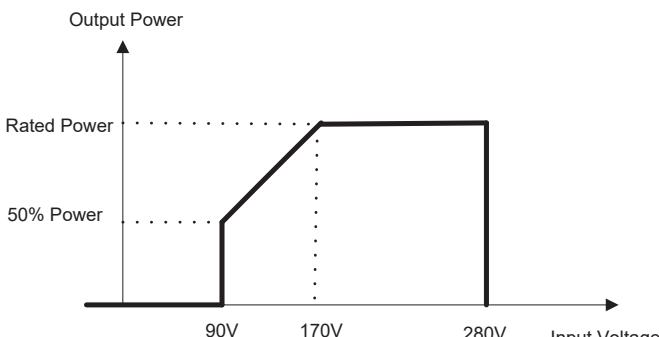
INVERTER MODEL	TommaTech C Pro 1.2K	TommaTech C Pro 3K	TommaTech C Pro 5K
Input Voltage Waveform	Sinusoidal (utility or generator)		
Nominal Input Voltage	230Vac		
Low Loss Voltage	170Vac±7V (UPS); 90Vac±7V (Appliances)		
Low Loss Return Voltage	180Vac±7V (UPS); 100Vac±7V (Appliances)		
High Loss Voltage	280Vac±7V		
High Loss Return Voltage	270Vac±7V		
Max AC Input Voltage	300Vac		
Nominal Input Frequency	50Hz / 60Hz (Auto detection)		
Low Loss Frequency	40±1Hz		
Low Loss Return Frequency	42±1Hz		
High Loss Frequency	65±1Hz		
High Loss Return Frequency	63±1Hz		
Output Short Circuit Protection	Circuit Breaker		
Efficiency (Line Mode)	>95% (Rated R load, battery full charged)		
Transfer Time	10ms typical (UPS); 20ms typical (Appliances)		
Output power derating: When AC input voltage drops to 170V, the output power will be derated.	 <p>The graph illustrates the output power derating. The vertical axis is labeled 'Output Power' and the horizontal axis is labeled 'Input Voltage'. A horizontal line represents 'Rated Power'. A second horizontal line represents '50% Power'. A vertical dashed line marks the '90V' input voltage. A diagonal line starts at (90V, Rated Power) and rises to (170V, 50% Power). From 170V to 280V, the power remains at 50% Power, indicated by a horizontal line. A vertical dashed line marks the '280V' input voltage.</p>		

Table 2 Inverter Mode Specifications

INVERTER MODEL	TommaTech C Pro 1.2K	TommaTech C Pro 3K	TommaTech C Pro 5K
Rated Output Power	1.2KVA/ 1.2KW	3KVA/3KW	5KVA/5KW
Output Voltage Waveform	Pure Sine Wave		
Output Voltage Regulation	230Vac±5%		
Output Frequency	50Hz		
Peak Efficiency	93%		
Overload Protection	5s@≥130% load; 10s@105%~130% load		
Surge Capacity	2* rated power for 5 seconds		
Nominal DC Input Voltage	12Vdc	24Vdc	48Vdc
Cold Start Voltage	11.5Vdc	23.0Vdc	46.0Vdc
Low DC Warning Voltage @ load < 50%	11.5Vdc	23.0Vdc	46.0Vdc
@ load ≥ 50%	11.0Vdc	22.0Vdc	44.0Vdc
Low DC Warning Return Voltage @ load < 50%	11.7Vdc	23.5Vdc	47.0Vdc
@ load ≥ 50%	11.5Vdc	23.0Vdc	46.0Vdc
Low DC Cut-off Voltage @ load < 50%	10.7Vdc	21.5Vdc	43.0Vdc
@ load ≥ 50%	10.5Vdc	21.0Vdc	42.0Vdc
High DC Recovery Voltage	15Vdc	31Vdc	62Vdc
High DC Cut-off Voltage	16Vdc	32Vdc	63Vdc
No Load Power Consumption	<35W		<50W

Table 3 Charge Mode Specifications

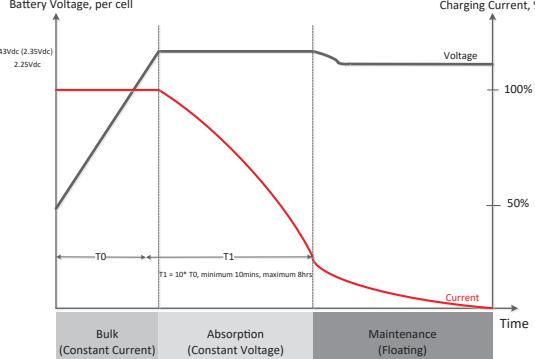
Utility Charging Mode			
INVERTER MODEL	TommaTech C Pro 1.2K	TommaTech C Pro 3K	TommaTech C Pro 5K
Charging Algorithm	3-Step		
AC Charging Current (Max)	80Amp (@V _{I/P} =230Vac)	60Amp	100Amp
Bulk Charging Voltage	14.6Vdc	29.2Vdc	58.4Vdc
Voltage	14.1Vdc	28.2Vdc	56.4Vdc
Floating Charging Voltage	13.5Vdc	27Vdc	54Vdc
Charging Curve			
MPPT Solar Charging Mode			
INVERTER MODEL	TommaTech C Pro 1.2K	TommaTech C Pro 3K	TommaTech C Pro 5K
Max. PV Array Power	2000W	3000W	5
Nominal PV Voltage	240Vdc		320Vdc
Start-up Voltage	70Vdc +/- 10Vdc		150Vdc +/- 10Vdc
PV Array MPPT Voltage Range	30~300Vdc (30V~60V with battery)	30~400Vdc (30V~60V with battery)	120~450Vdc
Max. PV Array Open Circuit Voltage	350Vdc	450Vdc	500Vdc
Max. Input Current	13Amp		18Amp
Max Charging Current (AC charger plus solar charger)	100Amp		

Table 4 General Specifications

INVERTER MODEL	TommaTech C Pro 1.2K	TommaTech C Pro 3K	TommaTech C Pro 5K
Safety Certification	CE		
Operating Temperature Range	-10°C to 50°C		
Storage temperature	-15°C~ 60°C		
Humidity	5% to 95% Relative Humidity (Non-condensing)		
Dimension (D*W*H), mm	90 x 288 x 357	110 x 288 x 390	120 x 300 x 440
Net Weight, kg	6.5	7.2	10

TROUBLE SHOOTING

Problem	LCD/LED/Buzzer	Explanation / Possible cause	What to do
Unit shuts down automatically during startup process.	LCD/LEDs and buzzer will be active for 3 seconds and then complete off.	The battery voltage is too low (<1.91V/Cell)	1. Re-charge battery. 2. Replace battery.
No response after power on.	No indication.	1. The battery voltage is far too low. (<1.4V/Cell) 2. Internal fuse tripped.	1. Contact repair center for replacing the fuse. 2. Re-charge battery. 3. Replace battery.
Mains exist but the unit works in battery mode.	Input voltage is displayed as 0 on the LCD and green LED is flashing.	Input protector is tripped	Check if AC breaker is tripped and AC wiring is connected well.
	Green LED is flashing.	Insufficient quality of AC power. (Shore or Generator)	1. Check if AC wires are too thin and/or too long. 2. Check if generator (if applied) is working well or if input voltage range setting is correct. (UPS→Appliance)
	Green LED is flashing.	Set "Solar First" as the priority of output source.	Change output source priority to Utility first.
When the unit is turned on, internal relay is switched on and off repeatedly.	LCD display and LEDs are flashing	Battery is disconnected.	Check if battery wires are connected well.
Buzzer beeps continuously and red LED is on.	Fault code 07	Overload error. The inverter is overload 105% and time is up.	Reduce the connected load by switching off some equipment.
		If PV input voltage is higher than specification, the output power will be derated. At this time, if connected loads is higher than derated output power, it will cause overload.	Reduce the number of PV modules in series or the connected load.
	Fault code 05	Output short circuited.	Check if wiring is connected well and remove abnormal load.
		Temperature of internal converter component is over 120°C.	Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.
	Fault code 02	Internal temperature of inverter component is over 100°C.	Return to repair center.
	Fault code 03	Battery is over-charged.	Check if spec and quantity of batteries are meet requirements.
		The battery voltage is too high.	Replace the fan.
	Fault code 01	Fan fault	1. Reduce the connected load. 2. Return to repair center
	Fault code 06/58	Output abnormal (Inverter voltage below than 190Vac or is higher than 260Vac)	Return to repair center.
	Fault code 08/09/53/57	Internal components failed.	Restart the unit, if the error happens again, please return to repair center.
	Fault code 51	Over current or surge.	
	Fault code 52	Bus voltage is too low.	
	Fault code 55	Output voltage is unbalanced.	
	Fault code 59	PV input voltage is beyond the specification.	Reduce the number of PV modules in series.

Appendix I: BMS Communication Installation

1. Introduction


If connecting to lithium battery, it is recommended to purchase a custom-made RJ45 communication cable. Please check with your dealer or integrator for details.

This custom-made RJ45 communication cable delivers information and signal between lithium battery and the inverter. These information are listed below:


- Re-configure charging voltage, charging current and battery discharge cut-off voltage according to the lithium battery parameters.
- Have the inverter start or stop charging according to the status of lithium battery.

2. Pin Assignment for BMS Communication Port

	Definition
PIN 1	RS232TX
PIN 2	RS232RX
PIN 3	RS485B
PIN 4	NC
PIN 5	RS485A
PIN 6	CANH
PIN 7	CANL
PIN 8	GND

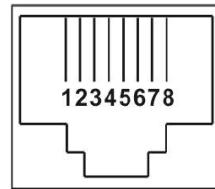

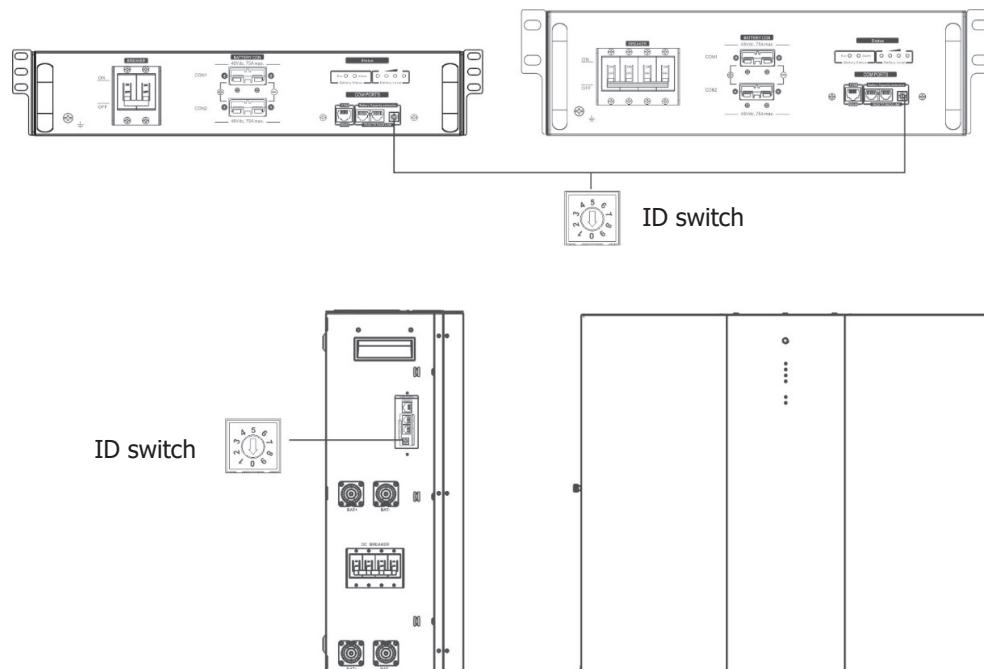
3. Lithium Battery Communication Configuration




PYLONTECH

After configuration, please install LCD panel with inverter and Lithium battery with the following steps.

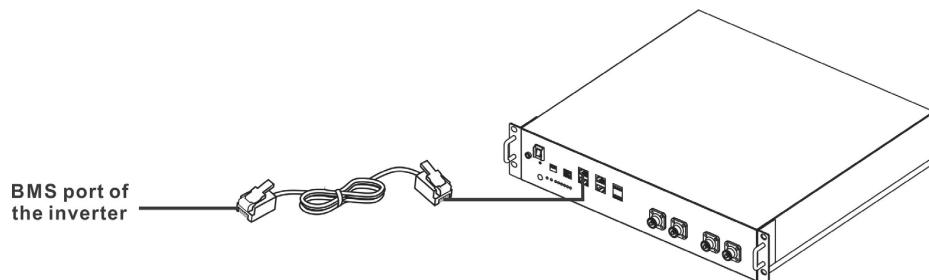
Step 1. Use custom-made RJ45 cable to connect inverter and Lithium battery.



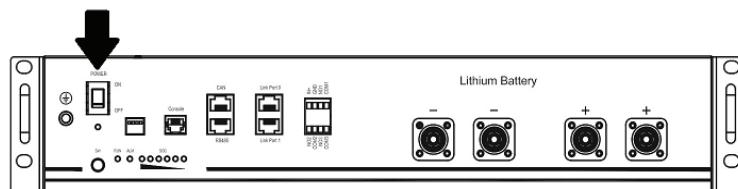Step 2. Switch on Lithium battery.



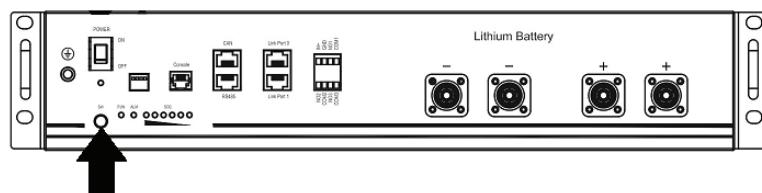
Step 3. Press more than three seconds to start Lithium battery. Output power is ready.



Step 4. Turn on the inverter.


Step 5. Be sure to select battery type as "PYL" in LCD program 5.

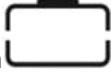05 PYL


If communication between the inverter and battery is successful, the battery icon  on LCD display will flash. Generally speaking, it will take longer than 1 minute to establish communication.

WECO

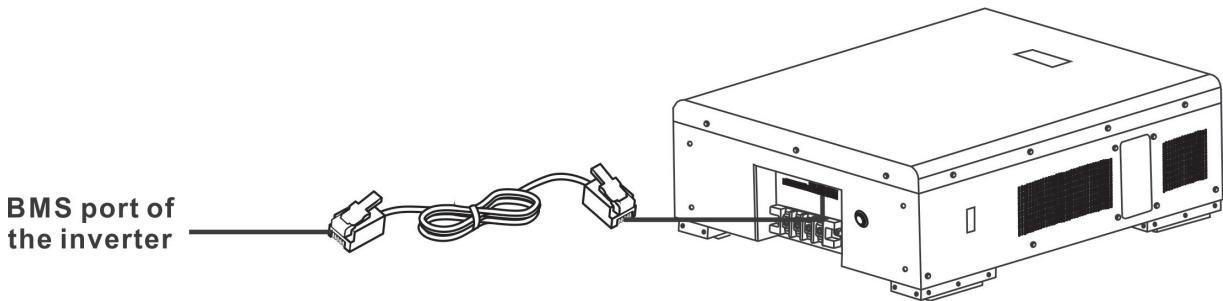Step 1. Use a custom-made RJ45 cable to connect inverter and Lithium battery.



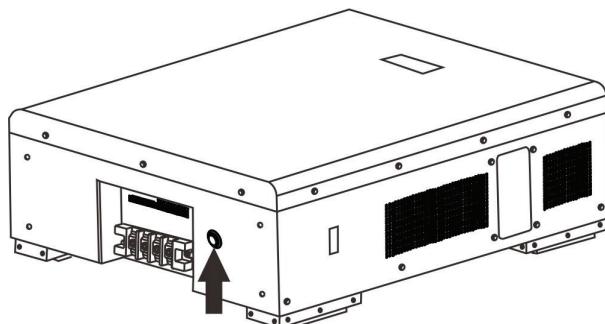Step 2. Switch on Lithium battery.



Step 3. Turn on the inverter.

Step 4. Be sure to select battery type as "WEC" in LCD program 5.

05 WEC



If communication between the inverter and battery is successful, the battery icon  on LCD display will "flash". Generally speaking, it will take longer than 1 minute to establish communication.

5. LCD Display Information

Press "UP" or "DOWN" button to switch LCD display information. It will show battery pack and battery group number before "Main CPU version checking" as shown below.





Selectable information	LCD display
Battery pack numbers & Battery group numbers	Battery pack numbers = 3, battery group numbers = 1  

Active Function

This function is to activate lithium battery automatically while commissioning. After battery wiring and commissioning is successfully, if battery is not detected, the inverter will automatically activate battery if the inverter is powered on.

5. Code Reference

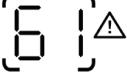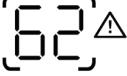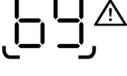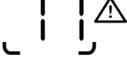Related information code will be displayed on LCD screen. Please check inverter LCD screen for the operation.

Code	Description
	If battery status is not allowed to charge and discharge after the communication between the inverter and battery is successful, it will show code 60 to stop charging and discharging battery.
	Communication lost (only available when the battery type is setting as any type of lithium-ion battery.) <ul style="list-style-type: none">● After battery is connected, communication signal is not detected for 3 minutes, buzzer will beep. After 10 minutes, inverter will stop charging and discharging to lithium battery.● Communication lost occurs after the inverter and battery is connected successfully, buzzer beeps immediately.
	Battery number is changed. It probably is because of communication lost between battery packs. Please check the cables between the batteries.
	If battery status is not allowed to charge after the communication between the inverter and battery is successful, it will show code 69 to stop charging battery.
	If battery status must be charged after the communication between the inverter and battery is successful, it will show code 70 to charge battery.
	If battery status is not allowed to discharge after the communication between the inverter and battery is successful, it will show code 71 to stop discharging battery.

Appendix II: The Wi-Fi Operation Guide

Introduction

Wi-Fi module can enable wireless communication between solar inverters and the monitoring platform. Users can remotely monitor and control their inverters when they combine the Wi-Fi module with TommaTech APP. The App uses the Wi-Fi chip to provide remote monitoring data services, which is beneficial for the daily data monitoring of the inverter, querying the real-time data in the device, sending commands from the device, and operating the device remotely. The app is available for both iOS and Android.

The major functions of this APP:

- Delivers device status during normal operation.
- Allows to configure device setting after installation.
- Notifies users when a warning or alarm occurs.
- Allows users to query inverter history data.



Distributors App

2-1. Download and install APP

Please find "TommaTech Admin" app from Apple® store or Google® Play Store. Install this app in your mobile phone.

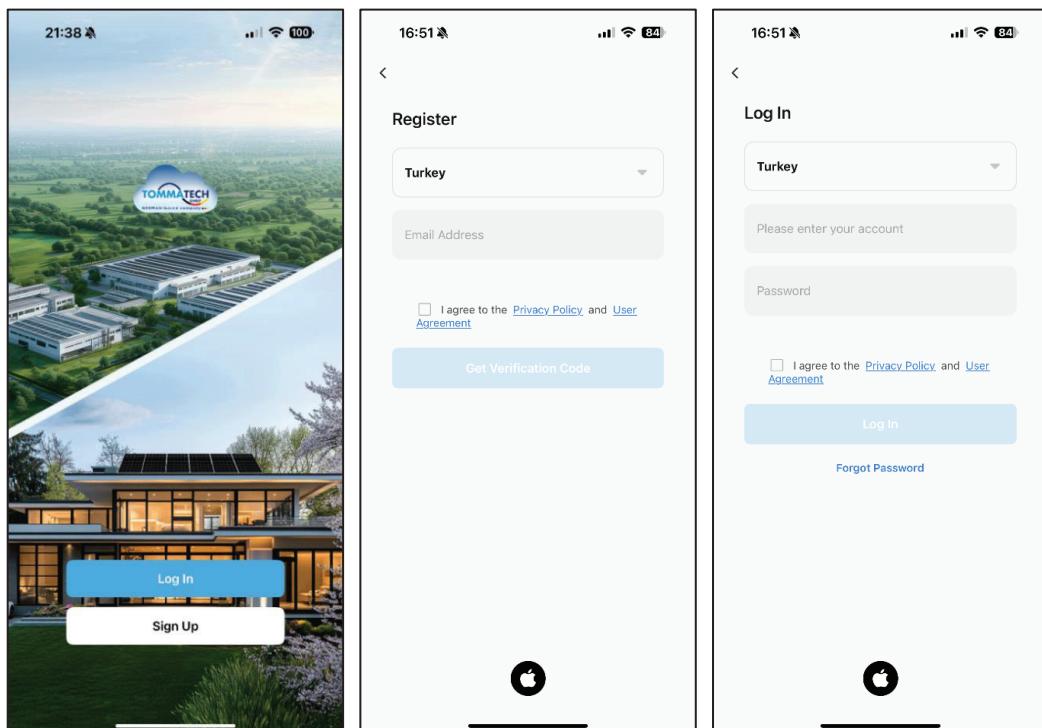


Or scan the following QR code with your smart phone and download TommaTech Admin App.



2-2. Registration and login


- Connect your smart phone to the router.
- Registration at first time.
- Click the “Log in New Account” to enter registration page and fill in the information. Then, enter the registered username and password to log in.



2-3. Initial Setup



2-3-1. Create home

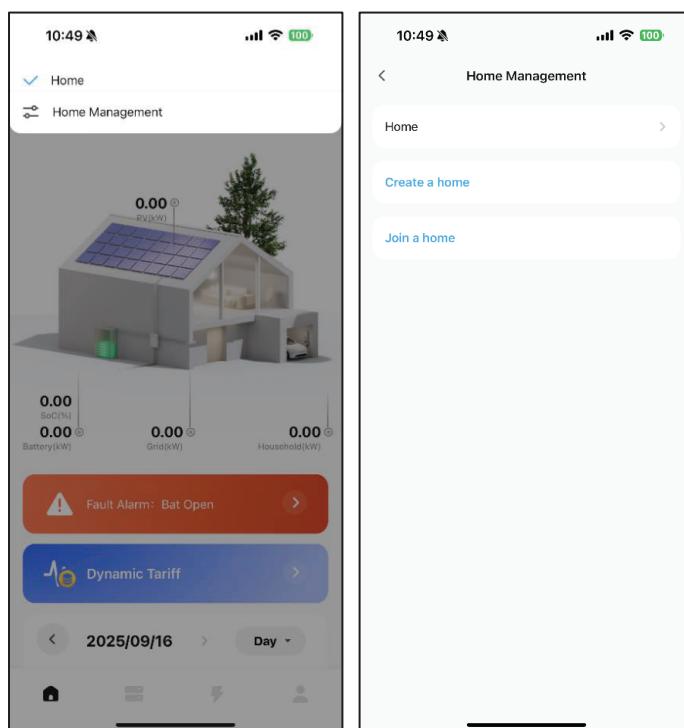- Enter the registered username and password to log in.
- Click the “Home Management”, “Create a home” and fill in the information to create home.




2-3-2. Add Wi-Fi module to the home and configure the network

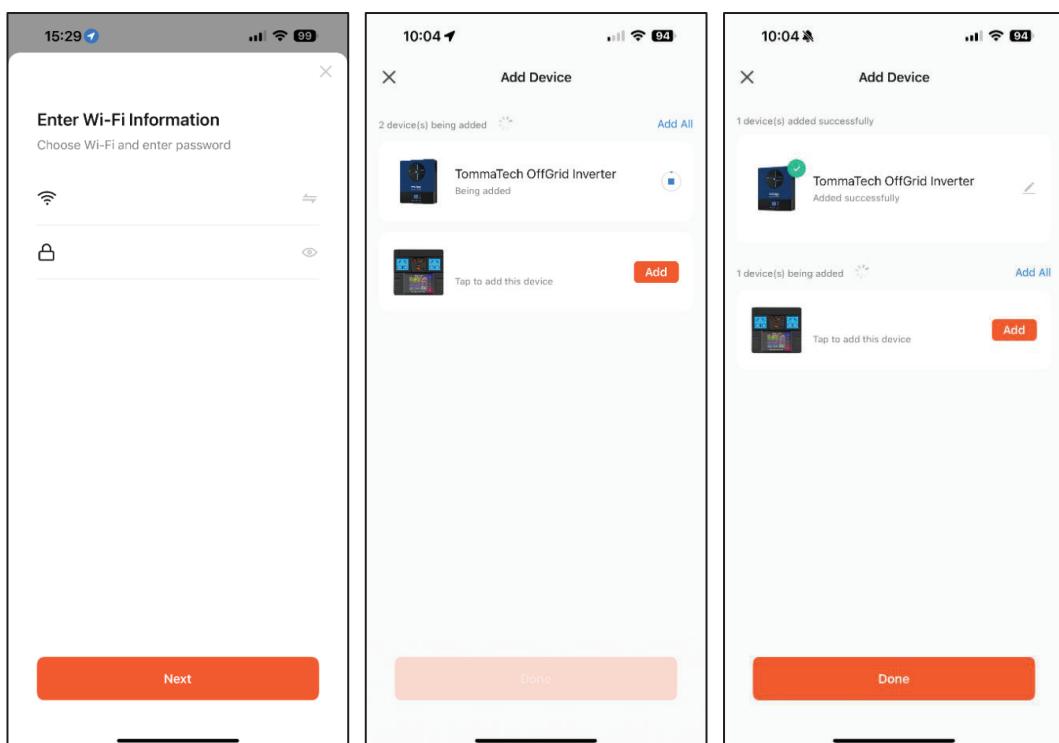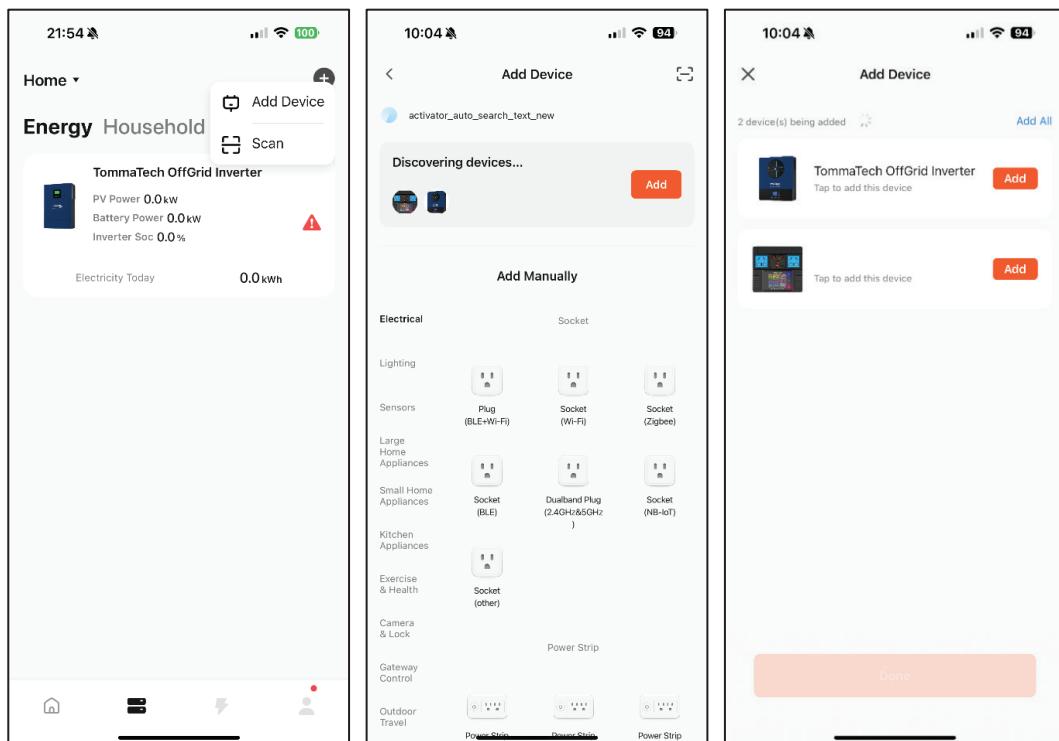- Turn on the unit.
- Click the “Add device” to search for nearby Wi-Fi modules that are not connected to the network.
The Wi-Fi module only could connect the router at **2.4GHz**.




2-3-3. Handover the Wi-Fi module from the distributors

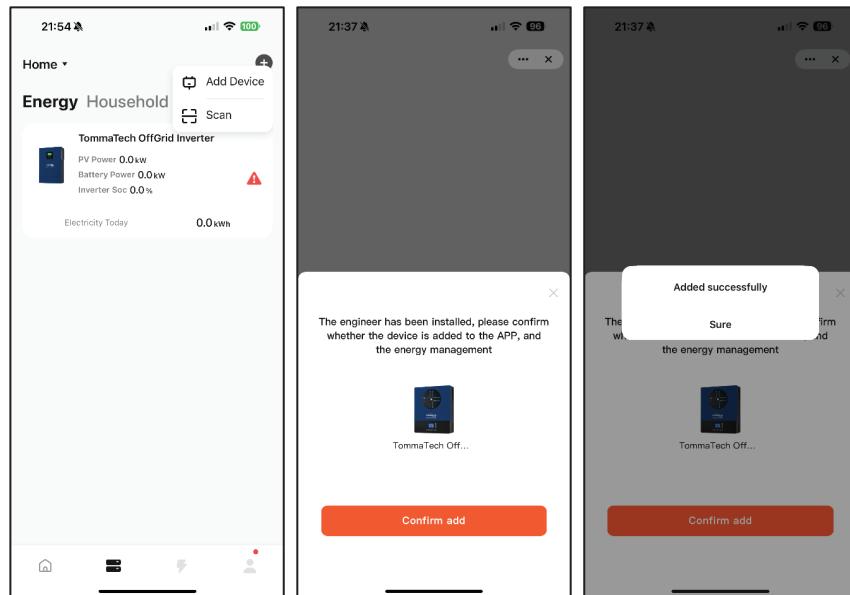- Click "Scan" to scan the QR code provided by distributors and then click "Confirm add".




2-4. Home Management

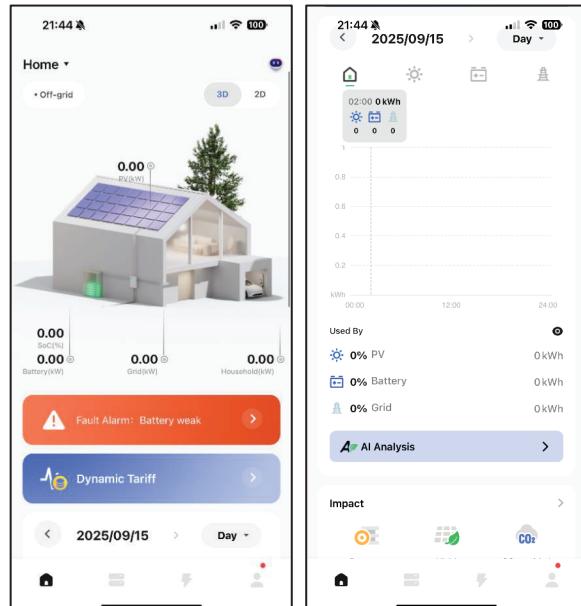- Includes "Data Flow Overview", "Fault and warning list, Dynamic Tariff, "Electrical Energy Analysis", and "Low-Carbon Contribution".




2-5. Device management

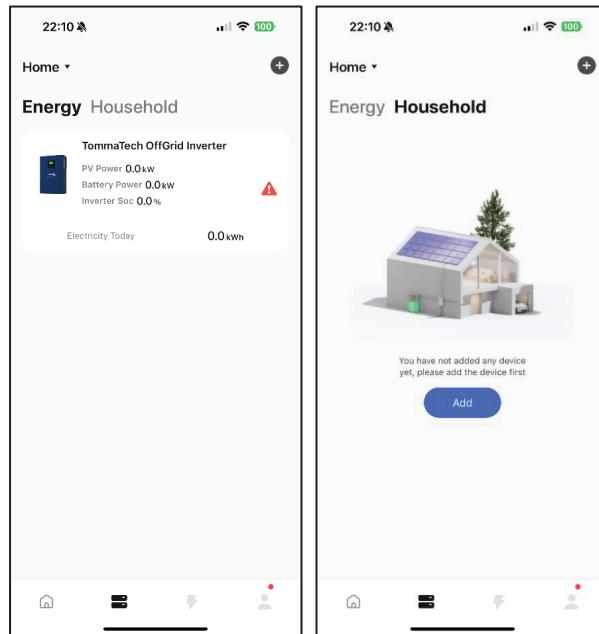- Includes "Energy" and "Household".




2-5-1. Dashboard

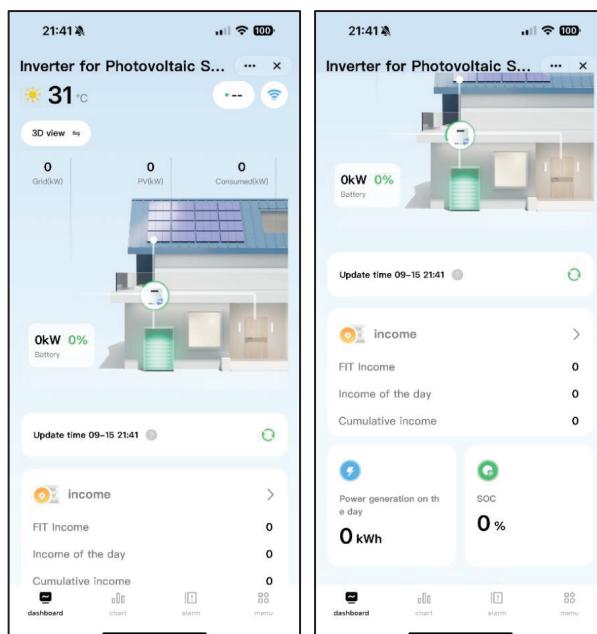- Includes "Data Flow Overview", "Income Analysis", "Power generation on the day", and "SOC".




2-5-2. Chart

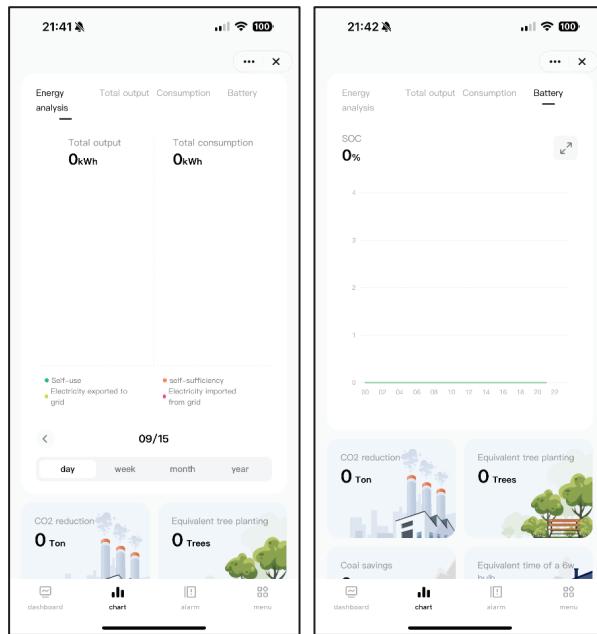- Includes "Energy Analysis", "Total Output Consumption", and "Battery" for the day, week, month and year.




2-5-3. Alarm

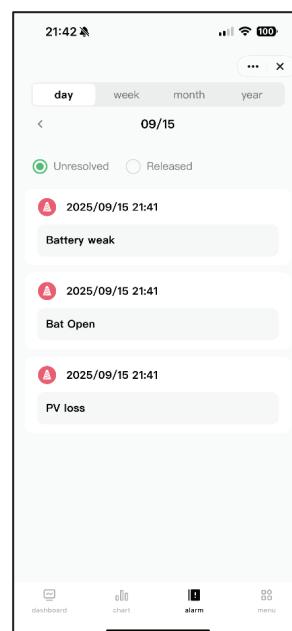- Display the warning and fault list for the day, week, month and year.



2-5-4. Menu

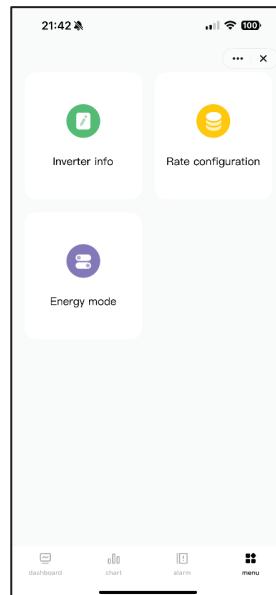- Includes "Inverter info", "Rate configuration", and "Energy mode".



2-5-5. Device information

- View the device information, Wi-Fi module signal strength, router SSID, and check the Wi-Fi module is the latest version.

